


Swanmac temporary cubicle screen assembly Instructions

- ✓ These are being manufactured at 2200mm length (bed length) and at 2100mm height.
- ✓ Standard fixed cubicle tracking is also at 2100mm; therefore, this product should work seamlessly with existing cubicle track bed layouts, whilst removing the need for permeant fittings AND providing flexibility.
- ✓ White PPC finish to all profile, clean with regular detergents.
- ✓ Tool requirements - only 1 x PH2 screwdriver/cordless, 8 x 25mm screws are provided. Approx. set up time per unit is 2 mins.
- ✓ Recommend two persons for manual handling of unit when assembled.

1) Layout all component profiles on floor, as diagram below:

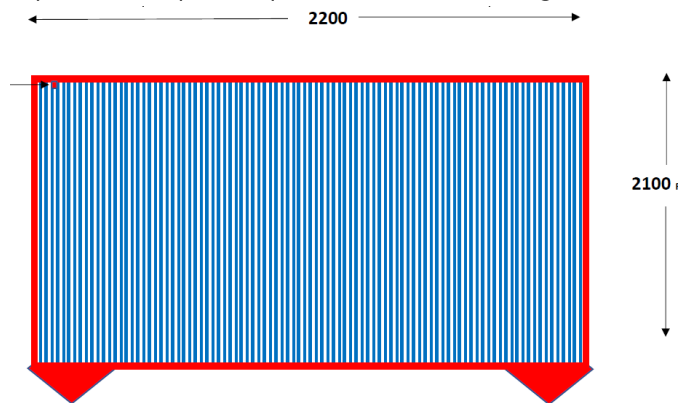

Pic of top of side profile:

Pic of bottom of side profile, showing support bracket:

Pic of top profile with curtain removal point:

Pic of base plate (no fixings required):



- 2) Ensuring top track is correct way around, with curtain insert facedown, place side profile, with wall shoe over each end of track, and insert 2x 25mm self-drill screws (per wall shoe).
- 3) Place base plates in position and carefully lift partially built frame and slide onto base plate inserts.
- 4) Then position bottom rail, this is for support only, ensure side profiles are pushed in tight and use 2x 25mm self-drill screws per angle bracket to fully secure and complete the frame build.
- 5) Ready to hang curtain! Exactly the same as any other standard cubicle curtain track, with removal point – simply pinch together and pull down to release, curtain simply slides off to change as appropriate.
- 6) Please ensure screws are tight and are checked every 5 working days that the screen is in operation.